


Please read instructions carefully before assemble the seat, and refer to Care instructions for maintenance.
The installation should be carried out by a qualified person.

Parts Supplied

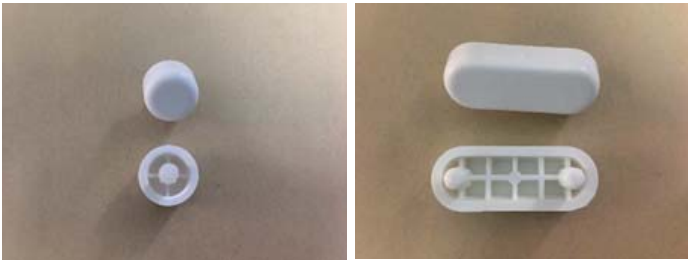

Parts Not Included



The seat lid and ring are with prime coating. Before assembly please paint the seat with the desired colour and wait until they are fully dry.
Place the seat lid onto a smooth and soft platform to protect against damage to surface during assembly.



Assemble two small round buffers onto the lid. Use plastic hammer to fit the small round buffers into pre-drilled holes if needed.



Place the lid onto a smooth and soft platform to protect against surface damage during assembly.



4
Assemble two big buffers onto the ring. Use plastic hammer to fit the buffers into pre-drilled holes if needed.



5
Position the lid on the platform and secure it in position to avoid moving.



6
Place the soft hinges as shown in below image, and fit them onto the lid by screws provided. Fix the screws into the plastic inserts.



7
Put a layer of cardboard as shown above to avoid scratches.



8
Fit the hinges onto the lid by screws provided. Fix the screws into the plastic inserts.



9
Once the seat is fully assembled, then follow below steps to install the seat onto the pan.

FITTING INSTRUCTIONS

Place the Seat Washers onto the Hinge Plate, and insert the Joining Bolts into the toilet-pan fixing holes.

Place the Black Washers through the Joining Bolts, and secure the Joining Nuts to the Joining Bolts, ensuring a secure final fit to the underside of the toilet-pan. Joining Nuts must be tight otherwise the seat will move around, but do not over tighten as this may damage the toilet-pan; after a few days further tighten nuts to allow for the compression of Seat Washers that would have occurred.

CARE INSTRUCTIONS

The toilet seat has been coated with a durable lacquer, but still needs to be treated with care.

- Surfaces should be cleaned regularly with a soft damp cloth and mild soap.
- Do not scrub or use abrasive cleaning materials.
- Do not use bleach or cleaners containing bleach.
- Polishing of the seat surfaces should not be needed, but a wax free polish is advised as this does not smear.
- As with all toilets seats: If you use bleaches and strong cleaners in the pan, do not leave the seat closed whilst the cleaner acts on the pan– the fumes from bleaches & cleaners may destroy and/or discolour the finish on the seat.
- **IMPORTANT!** Do not stand on the lid or toilet seat; this may cause damage to it.

INSTALLATION METHOD

